



# EQAS 2000 Auto Fill System (for use with H-5 heater only)

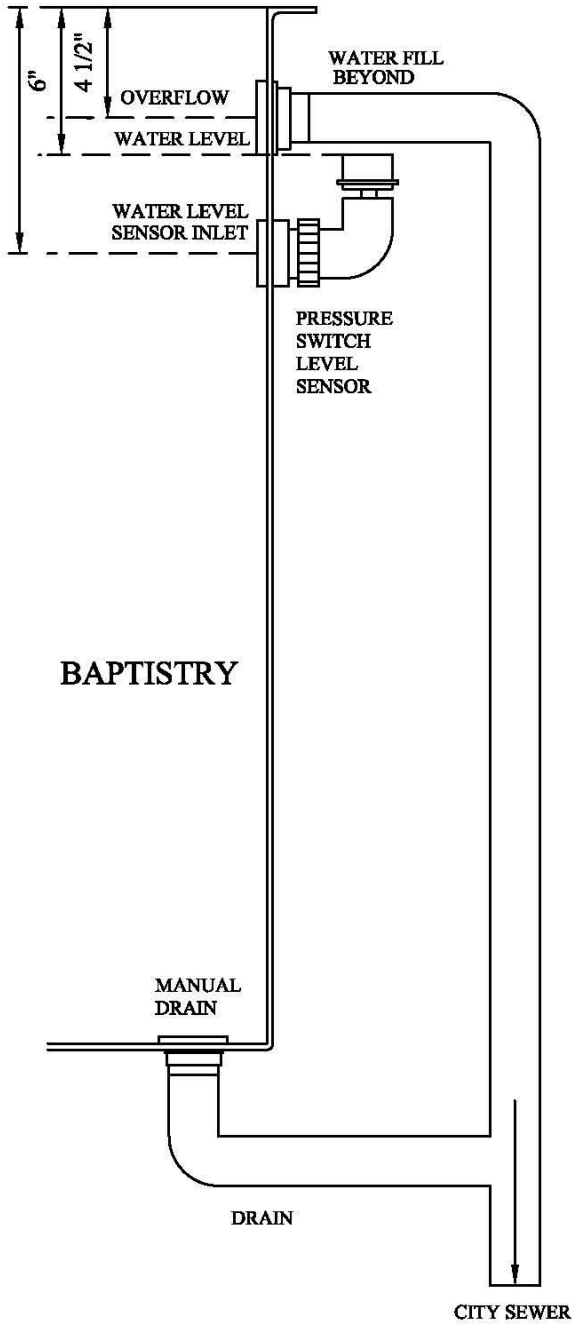

### HOLE SIZE CHART

| FITTING          | PART NUMBER | HOLE SIZE |
|------------------|-------------|-----------|
| PUMP INTAKE      | 42-0004     | 2 3/8"    |
| HEATER DISCHARGE | 42-0004     | 2 3/8"    |
| PUMP INTAKE      | 42-0004     | 2 3/8"    |
| HEATER DISCHARGE | 42-0004     | 2 3/8"    |
| PUMP INTAKE      | 42-0004     | 2 3/8"    |

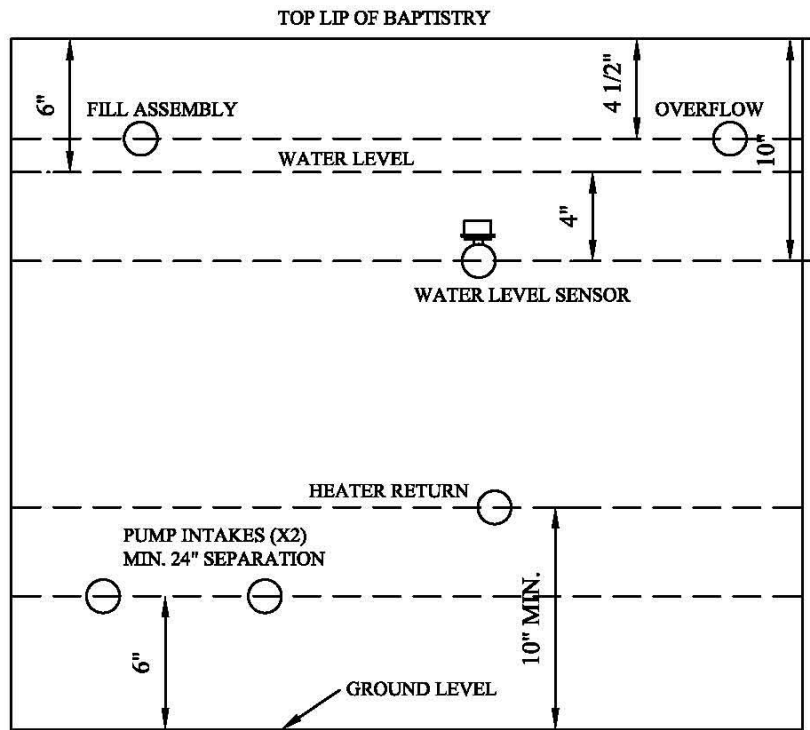

1. DRILL HOLES AS SHOWN.
2. SMOOTH SURFACE OF DRILLED AREA
3. INSTALL WALL FITTING WITH GASKET ON FINISHED SIDE OF BAPTISTRY.
4. INSTALL VALVES ON TO FINAL FITTINGS
5. PLUG WIRING INTO CONTROLLER.
6. PLUG CONTROLLER INTO HEATER.
7. INSTALL AIR BUTTON IN CONVENIENT LOCATION.
8. CHECK LEAKS AS BAPTISTRY BEGINS TO FILL.

